

User Guide

PROMPT Flex Cervical Dilatation & Effacement Module

Product No: 80102



For more skills training products visit limbsandthings.com

Limbs & Things Ltd.

Sussex Street, St Philips Bristol, BS2 ORA, UK sales@limbsandthings.com +44 (0) 117 311 0500

PROMPT Flex Cervical Dilatation & Effacement Module

Product No: 80102

This versatile module is an optional add-on to the PROMPT Flex Standard or Wireless Force Monitoring simulator. It allows for training in management of both the latent and active first stages of labour.

Skills

- Assessment and Bishop's scoring of:
 - Cervical dilation (1-10cm)
 - Cervical effacement (0-100%)
 - Cervical ripeness/consistency (soft, medium, hard)
 - Cervical position (anterior, mid, posterior)
 - Foetal station (-3 to +3)
- Assessment of and artificial rupture of membranes
- Assessment of presenting part flexed, deflexed, brow, face, breech, caput and moulding and caput formation

Key Features

- Inserts to represent early labour cervixes effacement, dilation and ripeness in line with Bishop's scoring
- Positioning mechanism allows adjustment of station, dilation and tilt without removal from the simulator
- Dynamic positioning mechanism allows adjustment of dilation in active labour
- Markers allow tutor to read positioning in situ
- Numerous presenting part inserts including flexed, deflexed, brow, face, breech, caput and moulding

Package supplied

- 80138 Perineum for PROMPT Flex CDE and C-Section Modules
- 80139 Pelvic Ring
- 80140 Static Rig
- 80141 Dynamic Rig
- 80142 Set of 7 Latent Labour Cervixes
- 80143 Dynamic Cervix
- 80144 Set of 5 Presenting Parts
- 80145 Set of 2 Difficult Labour Heads (includes parietal bones and 1 skin)
- 80146 Amniotic Membrane Set (includes 25 membrane sheets, O ring, syringe and fluid tube)
- 80162 Set of 3 Caput

Components



Perineum for PROMPT Flex **CDE and C-Section Modules** Product No: 80138



Pelvic Ring Product No: 80139



Static Rig Product No: 80140



Dynamic Rig Product No: 80141



Set of 7 Latent Labour Cervixes Product No: 80142



Dynamic Cervix Product No: 80143



Set of 5 Presenting Parts Product No. 80144



Set of 2 Difficult Labour Heads Amniotic Membrane Set Product No: 80145

Consumables



Product No. 80146



Set of 3 Caput Product No: 80162



Pack of 25 Membrane sheets Product No. 80147




PROMPT Birthing Lubricant Product No: 10193

Attaching the Cervical Dilatation & Effacement Perineum

This module is to be used in conjunction with your PROMPT Flex Birthing Simulator




Remove PROMPT Flex Abdominal Skin from the PROMPT Flex Unit

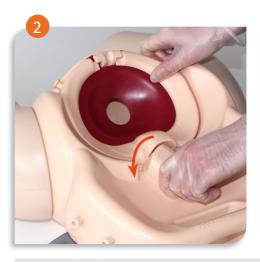



Remove the Pelvic Ring Clamp from the PROMPT Flex Unit

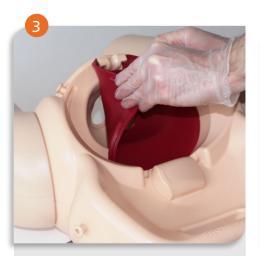

Remove the Cervix if present



Remove the birth canal and perineum by firstly detaching the perineal skin from the poppers on the mother unit, then carefully feed the birth canal through the pelvis



Once the top half of the perineum has been detached from the unit, detach the skin from the poppers on the bottom of the mother unit



Attach the Perineum for PROMPT Flex CDE and C-Section modules. Push the birth canal up through the pelvis



Fix the perineum top using the poppers



Fix the perineum bottom using the poppers

NOTE: Rolling the popper on side first is much more effective than pressing the whole popper on at once



The perineum is now in place. Some adjustment to the inside of the birth canal may be required to ensure it is seated properly in the pelvis

Static Rig set up



Fit the Cervical Dilatation Pelvic Ring



Select the Static Rig



Choose presenting part and fit to the Static Rig. Boss shape allows only one-way fitting, so that presenting part is always fitted with occiput/back of head aligned with arrow on head plate



Align and fit the bottom of the presenting part first



Firmly press the presenting part into place on the Static Rig



Presenting part can be used with or without a cervix. You would not use a cervix if you were simulating full dilation. If using without cervix, lubricate head prior to positioning in birth canal

Fitting Cervix



Once the presenting part has been fitted to the Static Rig, select cervix. Choose relevant cervix from the Set of 7 (0 - 4 cm)



Place the chosen cervix over the presenting part. A small amount of lubricant on the inside of the cervix will aid fitting



Stretch the chosen cervix over presenting part in the Static Rig



Ensure that the cervix covers the presenting part and that the edges fold around the base of the presenting part



The cervix is now fitted



Lubricate the outer surface of the cervix prior to positioning the rig in the birth canal

Fitting the Static Rig to Cervical Dilatation Pelvic Ring



Lubricate birth canal



Press the button on either side of the Static Rig and with the presenting part facing down, fit the two gaps on the Static Rig (next to the buttons) over the cervical dilation pelvic ring






Once fitted, press the buttons on either side of the Static Rig to adjust the station (-3 - \pm 3)






Adjust cervical position (tilt) by pulling the lever on the positioning rod and moving along the notched guide. The position of the rod gives degrees of positioning between anterior, mid, and posterior

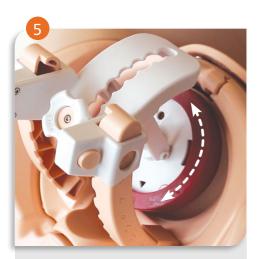

Adjust foetal position (rotation) by rotating the cervix. The arrow on the boss plate always points to the direction of the occiput (the back of the baby's head)

Dynamic Rig set up

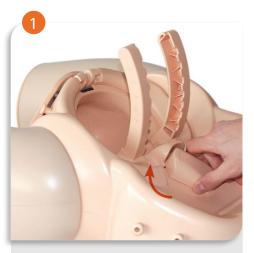

Fit the Cervical Dilatation Pelvic Ring




Select the Dynamic Rig and follow steps 3 - 5 in the Static Rig set up








Fitting Dynamic Cervix

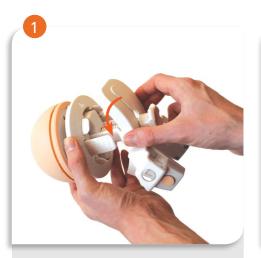

Rotate the rear end of the Dynamic Rig



This will make it easier to attach the cervix

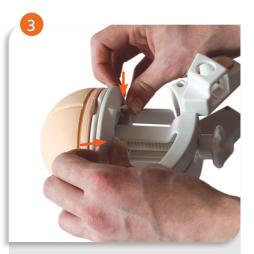

Gently press down with thumbs on the two tabs, and place fingers between the two rings



Gently pull the top ring away from the bottom ring to separate



Repeat this process on the other side of the Dynamic Ring, and separate the two rings



Now that the two rings are separated, turn the knob clockwise until the bottom ring rests just below the presenting part



The Dynamic Cervix is now ready to be fitted



Lubricate the presenting part



Select the Dynamic Cervix



Place the Dynamic Cervix over the presenting part





Stretch the Dynamic Cervix over presenting part in the Dynamic Rig. Ensure that the cervix covers the presenting part and that the edges fold around the base of the presenting part and the bottom ring



Take the loose top ring and line up the clamps so that the ring can be fitted into place. Line up the two arrows (one on the top ring and one on the clamp)



Press the top ring over all of the clamps



The top ring can then be clicked into place and secures the Dynamic Cervix in place



Alternatively, to change the presenting part, peel back the Dynamic Cervix to swap over

* Lubricate liberally between the presenting part and cervix before use

Fitting the Dynamic Rig to Cervical Dilatation Pelvic Ring




Lubricate birth canal as shown and between the cervix and presenting part



Press the button on either side of the Dynamic Rig and with the presenting part facing down, fit the two gaps on the Dynamic Rig (next to the buttons) over the Cervical Dilatation Pelvic Ring



Once fitted, press the buttons on either side of the Dynamic Rig to adjust the station (-3 - +3)

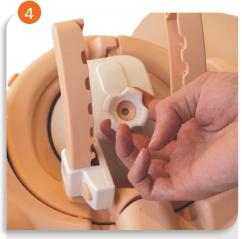

Adjust cervical position (tilt) by pulling the lever on the positioning rod and moving along the notched guide. The position of the rod gives degrees of positioning between anterior, mid, and posterior




The Dynamic Cervix stretches from 4 – 10cm dilated.






Sometimes when dilation is changed from between 8-10 to a lower setting, the cervix can catch and concertina. To remedy this, run your finger round the cervix with some lubricant. This can be done with the Dynamic Rig fitted in the model, or when it is separate from the model

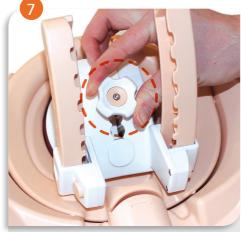

Turn the knob clockwise to enlarge or anticlockwise to narrow down

How moulding and caput formation is simulated using the module

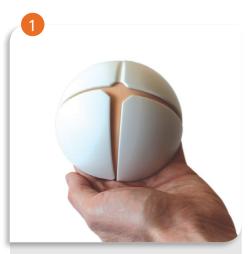

Select one of the two Difficult Labour Heads. They represent a flexed and deflexed head. Each comes with one section of parietal bone fixed onto the head



The other two sections of parietal bone are moveable up or down to allow variation in the degree of moulding





There are three sizes of caput provided.
Select one of the caputs and place on top of the parietal bones
(The larger the caput used the more difficult it will be to feel the fontanelles)





Attach the Skin for Difficult Labour over the top of the Difficult Labour Head by placing thumb in the centre of the skin and pulling around the head. The thumb holding the skin should also hold the caput in place








The Difficult Labour Head is now ready to be fitted to the Rig (follow Rig Setup instructions to fit the head to the rig)

How membrane rupture is simulated using the module

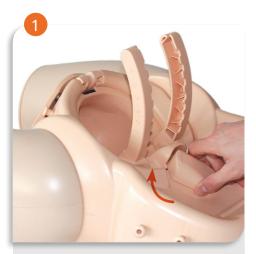

Fit the Cervical Dilatation Pelvic Ring



Select the Static Rig





NOTE: Each of the heads has a small hole at the rear for the fluid tube to attach, and a hole on the top of the head where the water flows out when the membrane is in place



Select the flexed or de-flexed head. Peel away the membrane from the backing paper



Place the membrane sheet centrally over the selected head



Place the O ring on top of the membrane



Roll the O ring down until it locates the groove along the edge of the head



Select a cervix



Stretch the cervix over the head and membrane



Fit the head to the Static Rig



Rotate the head so that the hole on the underside of the Static Rig is easy to access



Attach the fluid tube



Rotate the head back into the correct position with the arrow at the top and the tube at the bottom



Lubricate the outer surface of the cervix



Lubricate birth canal




Press the button on either side of the Statig Rig and with the presenting part facing down, fit the two gaps on the Statig Rig (next to the buttons) over the Cervical Dilatation Pelvic Ring



The Static Rig is now in place




Fill the supplied syringe with 60ml of warm water and attach it to the fluid tube

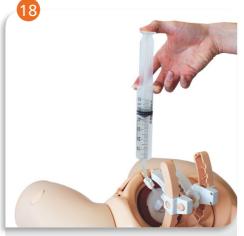

Open the clamp on the tube. The water can now be injected into the model. Once all of the liquid has collected within the membrane, the membrane can be ruptured



SELECT THE STATIC RIG

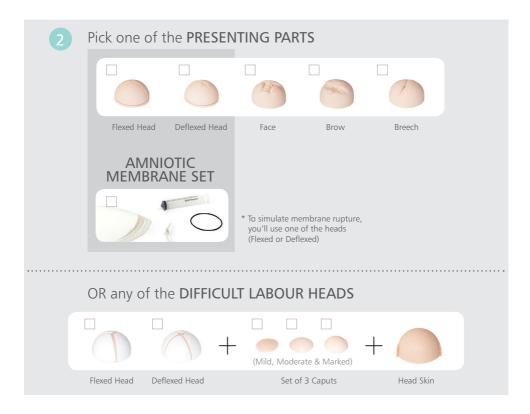




^{*} We recommend using 3 to 4 cm dilatation cervixes when training Difficult Labour Heads or Amniotic Membrane





SELECT THE **DYNAMIC RIG**

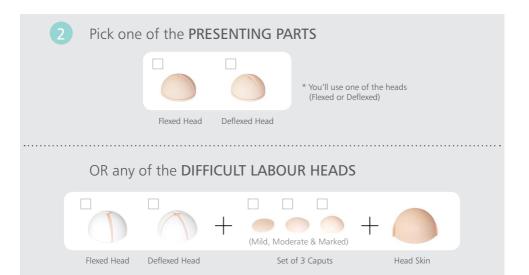





A good starting point...





Visit the website or YouTube channel

limbsandthings.com

youtube.com/limbsandthings



Part No: 165-008 Issue 3, JULY 2017 © 2017 Limbs & Things